


WIRING DIAGRAM

Heat pump (air or geothermal) with auxiliary heat.

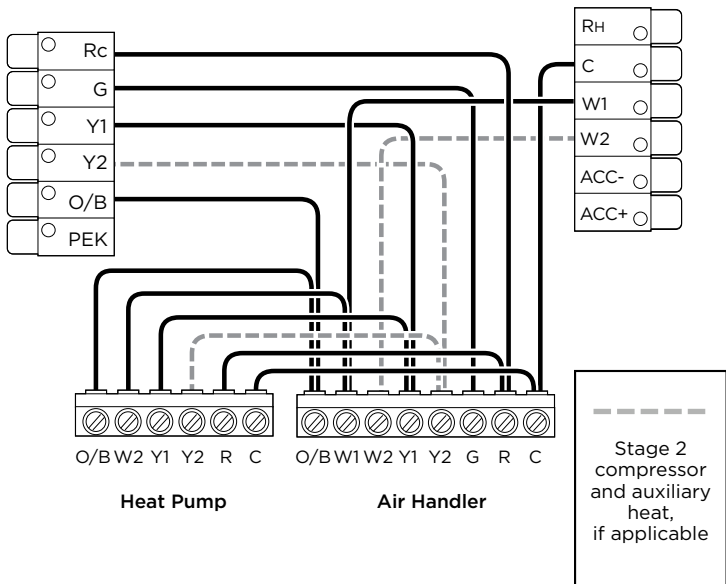

NOTE Do not connect any jumper wires between Rc and Rh. ecobee does this automatically. The R wire needs to go into the Rc terminal on your ecobee.