



ecoer


EEV Kit Installation Guide

Make your home Green & Smart

Danger!

Turn off the system's power and wait until it is fully powered down before proceeding with this installation.


EEV Kit

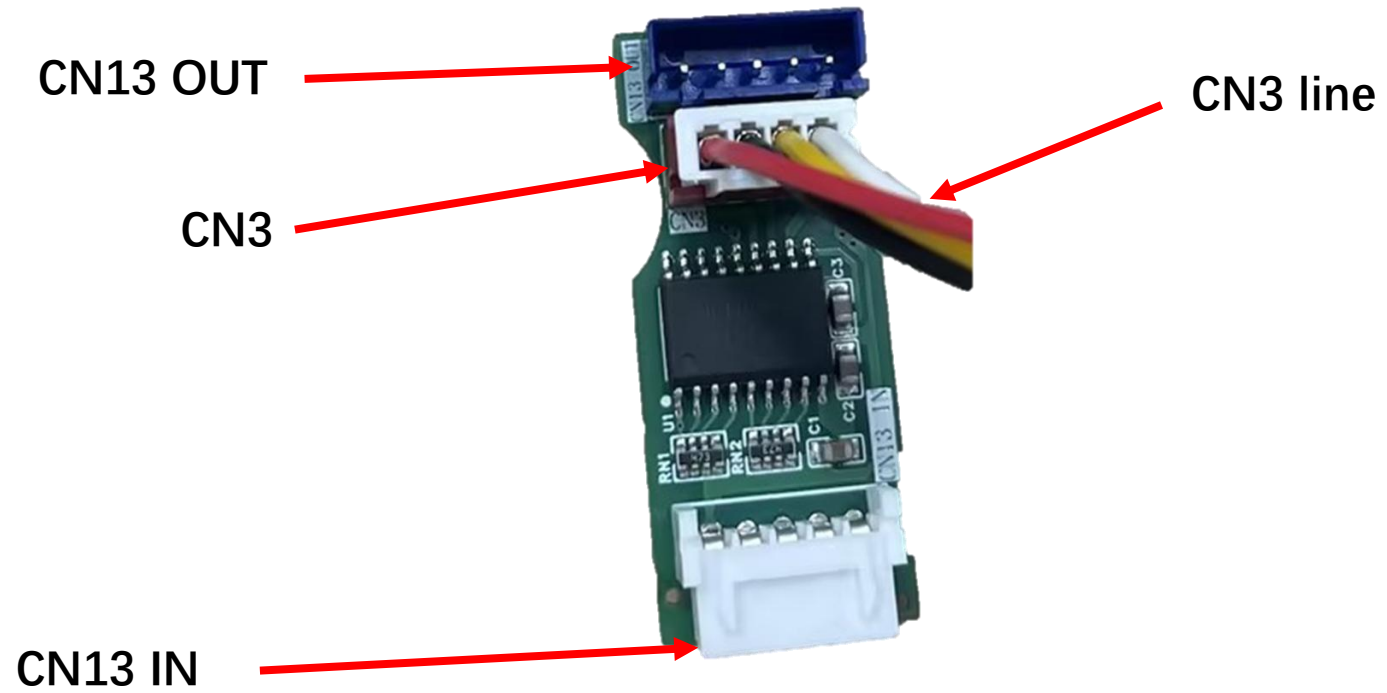

Installation Guidance


Step 1: Remove the outdoor unit's electric control box cover and use a screwdriver to remove the black protective cover on the motherboard.

Black protective cover


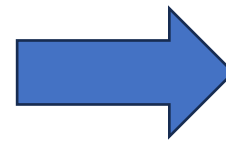


Installation Guidance

Step 2: Find the EEV interface CN13 on the board, and then unplug the EEV line from mainboard.

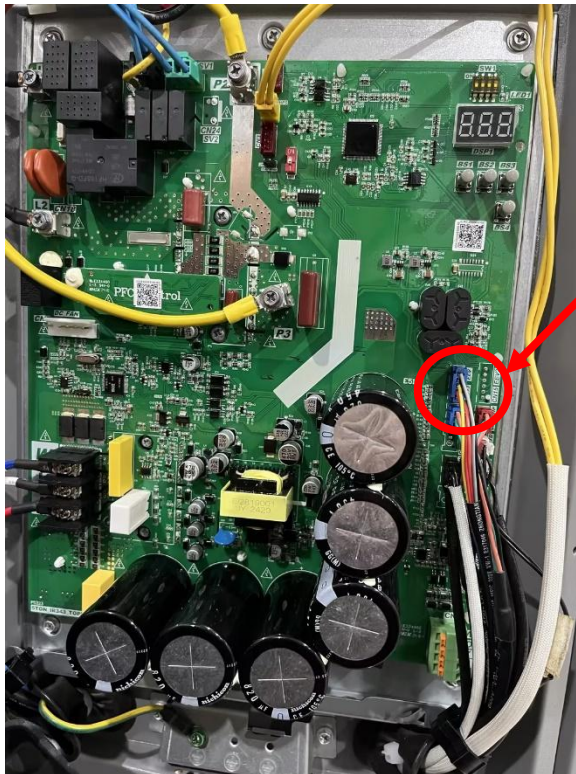




EEV line
connection

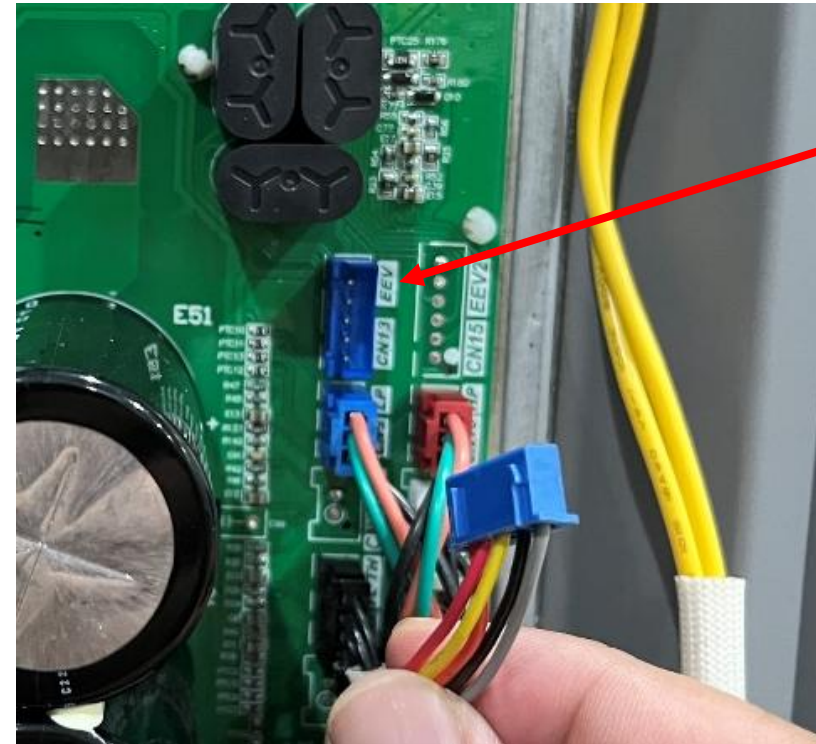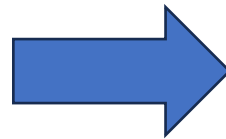

Unplug the
EEV line from
mainboard

Installation Guidance

Step 3: Connect the unplugged EEV line to the EEV Kit CN13 OUT port, and then insert the EEV Kit into the original EEV Interface on the mainboard.

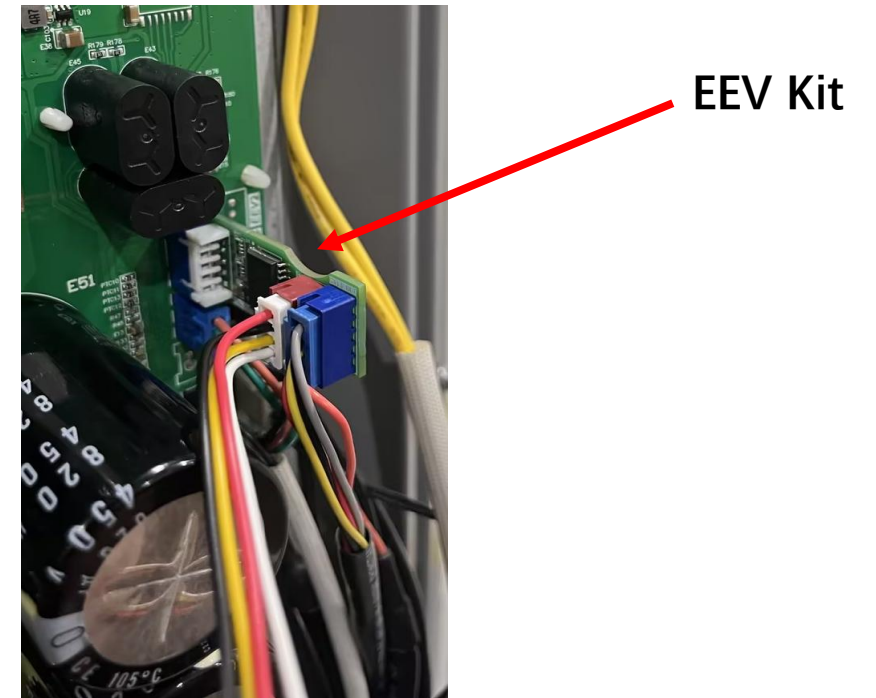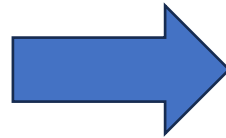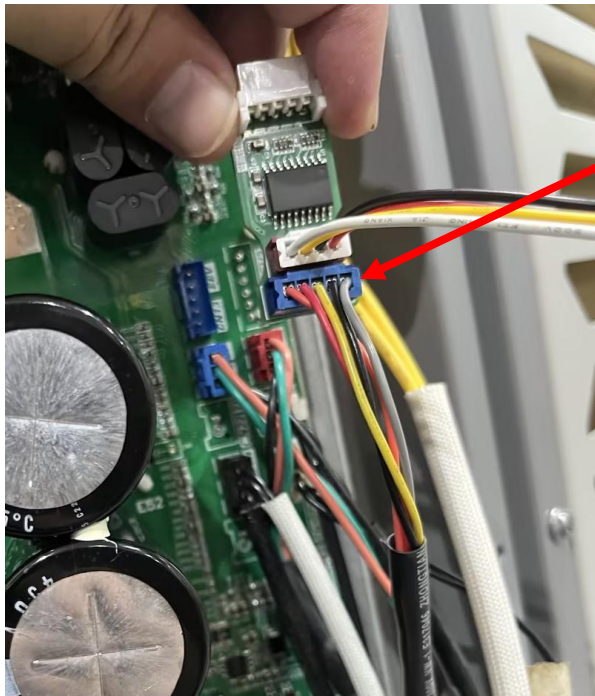


Installation Guidance

Step 4: Connect the CN3 line from the EEV Kit to the CN3 interface on the mainboard, and the entire installation process is successfully completed.

Step 5: When installation is complete, reinstall the black protective cover.



CN3 Interface
On the mainboard

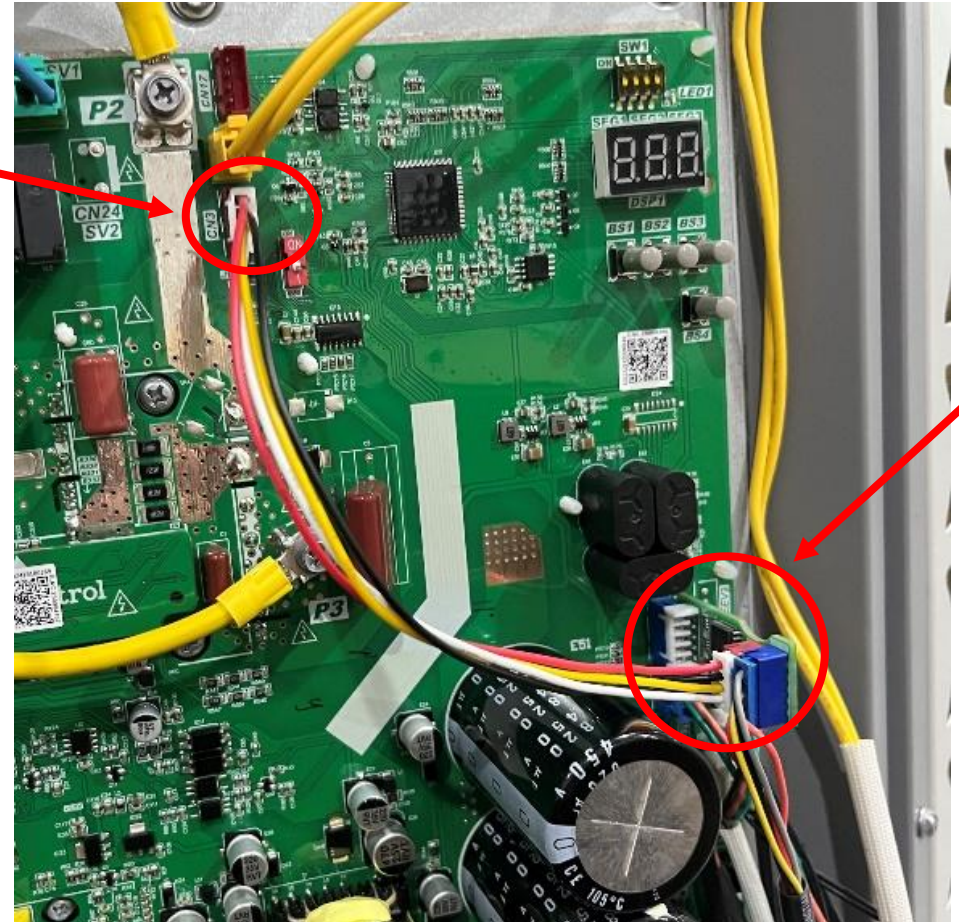

EEV Kit

Notice:

During the installation process, the power supply must be disconnected before installation operations can be performed. Pay attention to electrical safety.